

# Simplicity Touch Interactive Flat Panel


## No Signal Error

After using Power Point on the Simplicity Touch, the computer may change the display setting and disable the signal to the panel. The panel then displays **NO SIGNAL** message.

To fix the error

- Make sure the flat panel is powered on.
- Right click in any empty part of your desktop.


- Select **Intel Graphics Settings**.

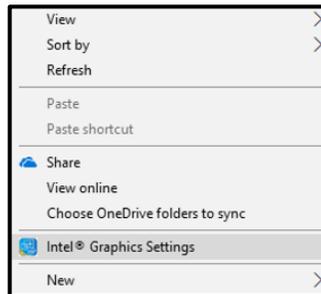

- Click **Display**.



- Click **Multiple Displays** in the left-hand column.

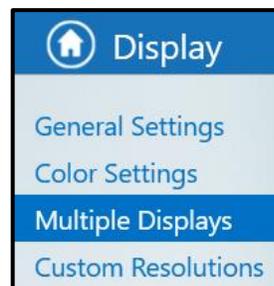

- In the Select Display Mode section, click **Clone Displays**, then click **Detect**.

**NOTE:** You can also, choose Extended view, if that's how you use your flat panel.



- Click **Apply** in the bottom right-hand corner.



- You may have to do this after each time you use PowerPoint in slide show mode.

If you don't see Intel Graphics when you right-click on the desktop, click **Screen Resolution > Multiple Displays**, then choose **Cloned** or **Extended** from the drop-down menu.